
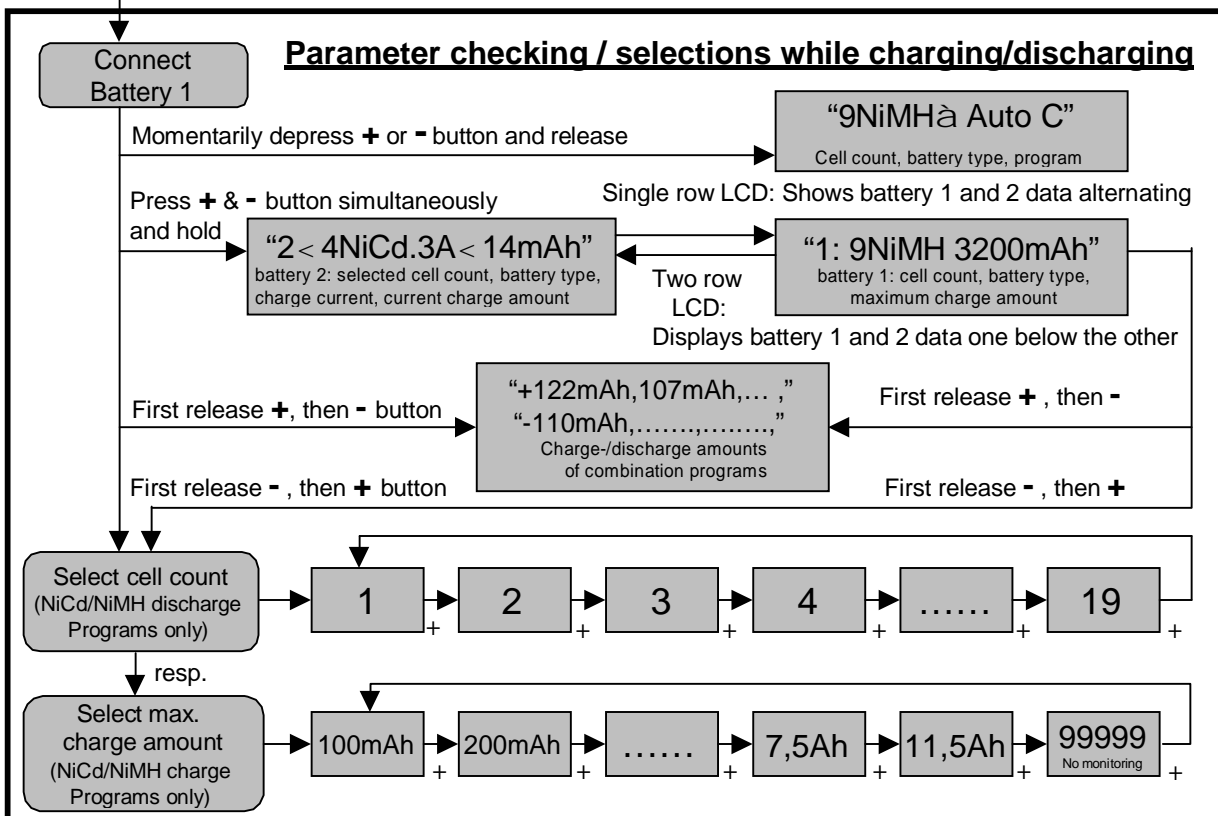


# isl 6 – battery 1 output




operating instructions (shortform) for softwareversion 8

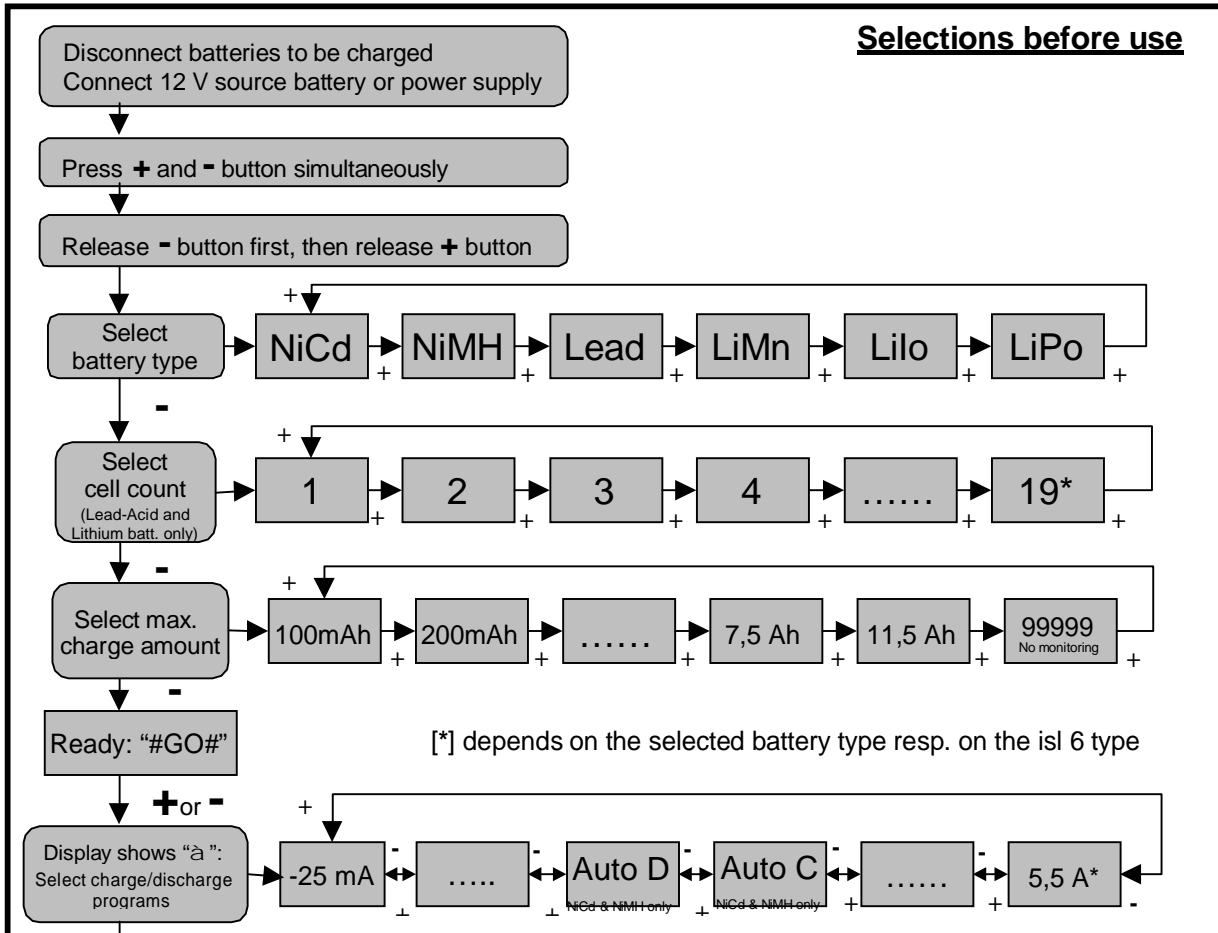

i6-short-GB issue 14 OCT 2003

# isl 6 – battery 2 output

operating instructions (shortform) for software version 8

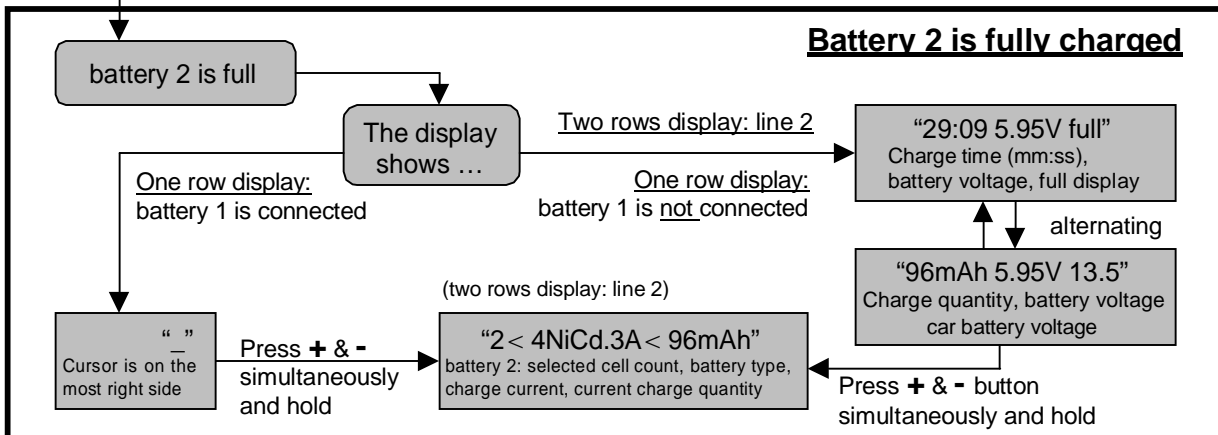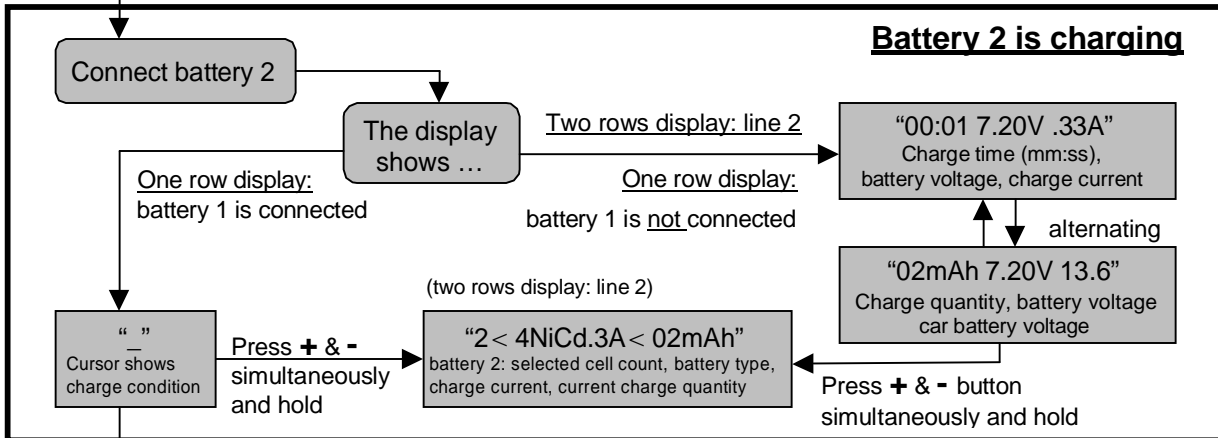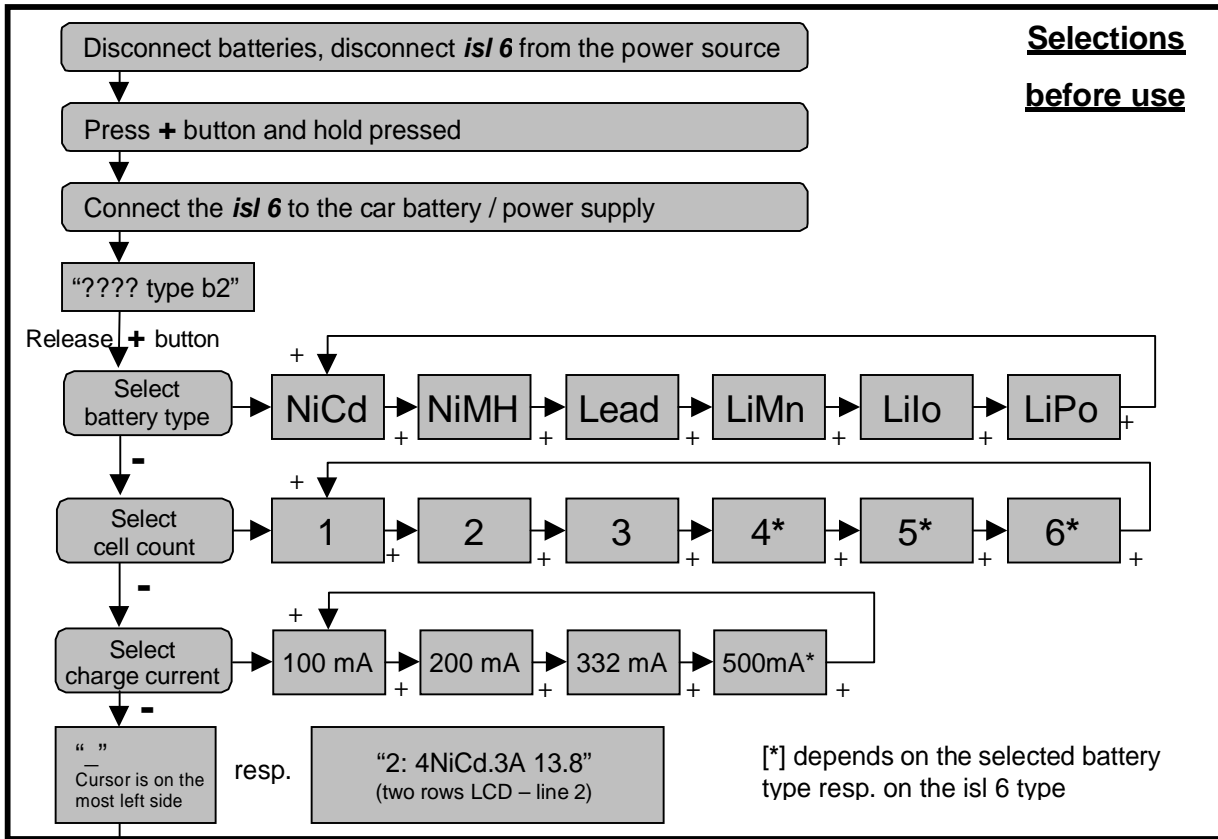

i6-short-GB issue 14 OCT 2003