


Canterbury Sailplanes **TRACER**

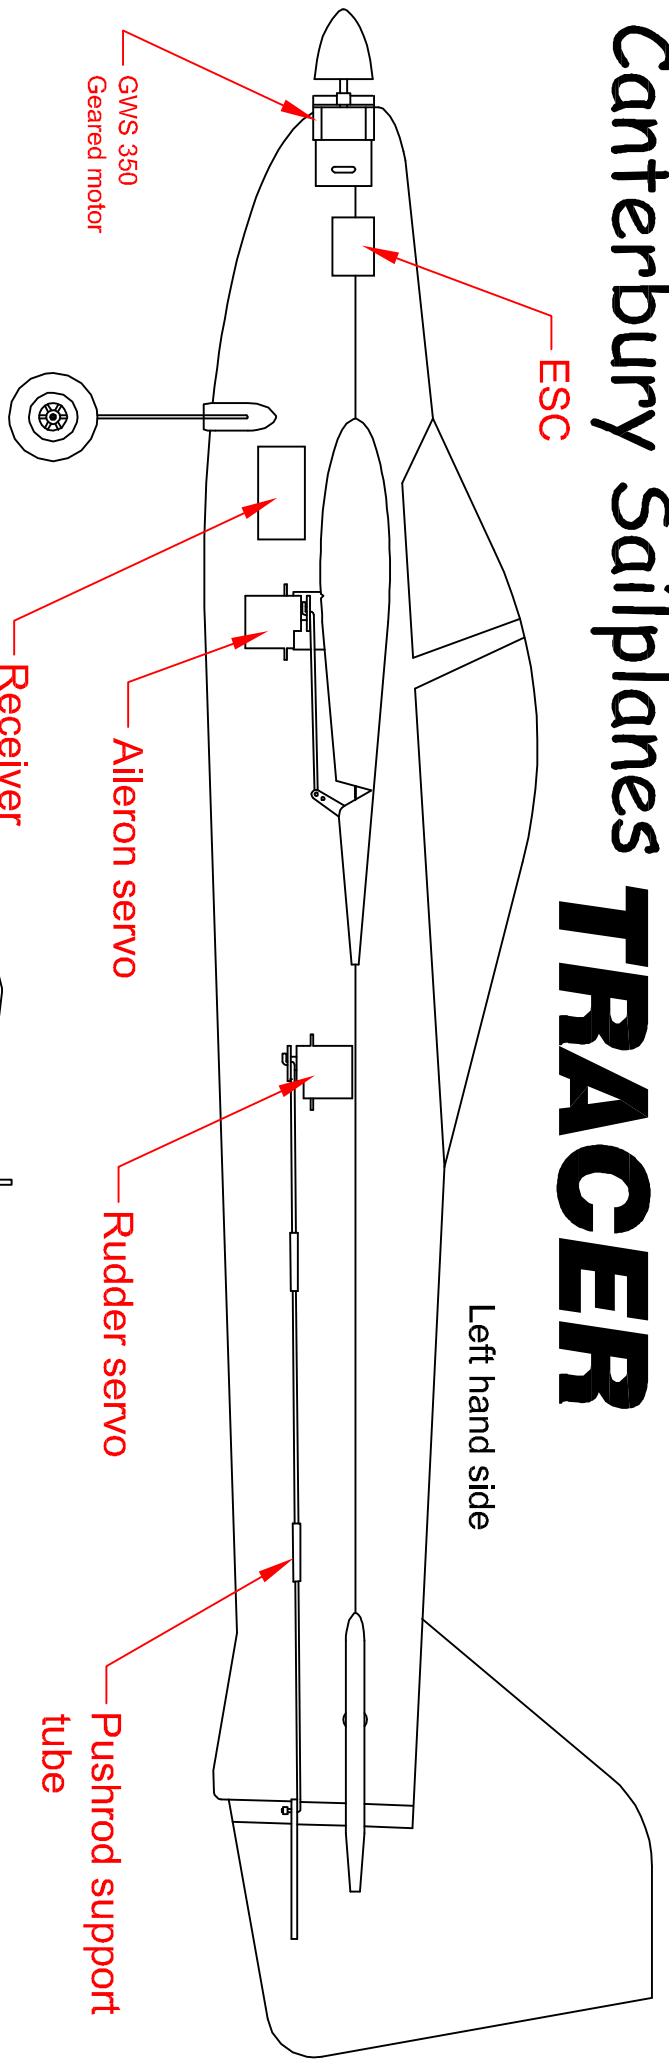

Z-Bend this end

Typical arrangement for pushrods (Aileron and Elevator pushrods shown).

Rotate this end section 90° for the rudder pushrod.

